



By-Pass Filter Installation

2004 Chevy Duramax Diesel

AMSOIL Dual Remote By-Pass Filter System
Submitted by Dealer Doug VanWingerden



Stock filter location



Remove heat shield



Cut angle iron for filter mount support




Use filter mount for template and drill holes



Attach angle to mount location,
use existing stock bolts



Drill and attach bolts through sheet metal lip and
edge of angle. This will add support for mount.

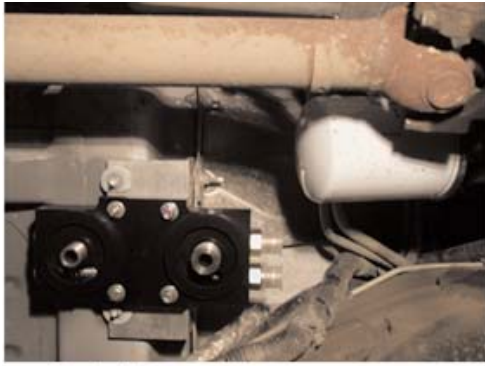

Attach filter mount



Replace old filter with spin on adapter
Make up hoses and connect



Completed installation

Disclaimer: These installation examples have been submitted by sources independent of AMSOIL INC. and may not comply with AMSOIL INC. installation instructions or application recommendations.